


ECONO ROLL Instructions

1. Twist the feet

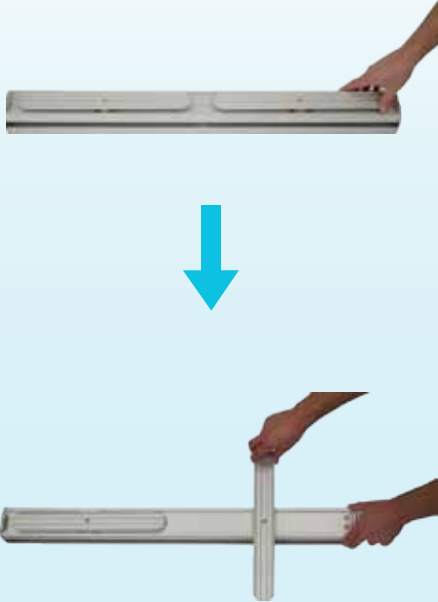

2. Unfold pole



3. Pull the banner out of the base.



4. Keep pulling the banner out of the base.



5. Attach the graphic rail to the hook at the top.



6. Done!

