

Wind Dancer Spire Conversion

Wind Dancer is a great option for outdoor and indoor banner display. It offers an adjustable display height of up to 16' and comes with a hollow base allowing the option of adding either water or sand as a weighting agent. The Spire conversion allows for a dual display that looks great.



features & benefits

- Height up to 16'
- Dual display
- Graphic is up to 4000mm tall
- Indoor or outdoor option
- Water or sand fillable base can be weighted for more stability
- No tools required to assemble



hardware specifications

Wind Dancer accessory

Shipping Weight:
1.8kg or 4lbs approx

Shipping Dimensions:
1300mm x 160mm x 80mm
52" x 6.3" x 3.15"


graphic specifications

Maximum Graphic Dimensions:
Bottom width = 500mm/19.7"
Top width = 1000mm/39.4"
Height = 4000mm/157.5" max

Substrate:
Flag material or 12oz vinyl.
With UV resistant ink for outdoor use.

additional info


Assembly Instructions

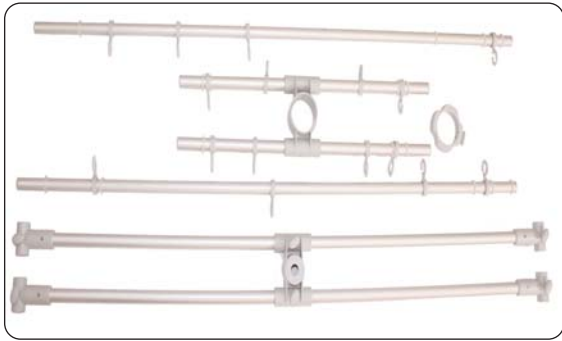

Kit includes: 1x Bottom mounting horizontal pole set, 2x upper mounting horizontal poles, 1x upper mounting assembly, 1x retaining ring, 16x graphic mounts, 16x stoppers.



1 Start with the wind dancer flag pole.

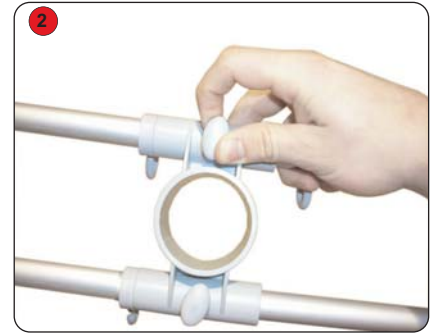


2 The Bottom Mounting Horizontal Pole Set can be adjusted by loosening and tightening the screws on top.



3 Slide the Bottom Mount over the flag pole, and let it sit on the bottom.



4 Next, slide the Retaining Ring over the pole, and have it sit on top of the Bottom Mount

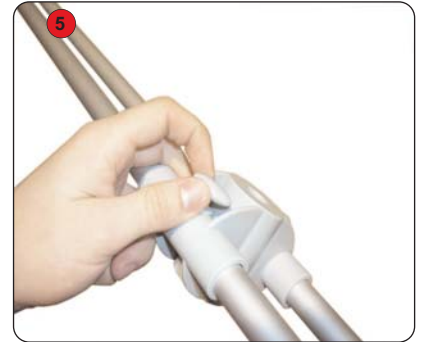

5 The Upper Mounting Assembly can also be adjusted with the screws on top.



6 Remove the screw from the top of the flag pole.



7 Place the Upper Mount onto the top of the flag pole.



8 Replace the screw to the top of the flag pole to keep everything in place.

Assembly Instructions




Your Upper Mount and Bottom Mount should be perpendicular to each other.



Remove the Stoppers and Graphic Mounts from the Upper Mounting Horizontal poles.




Slide the Horizontal poles through the Upper Mounting Assembly.

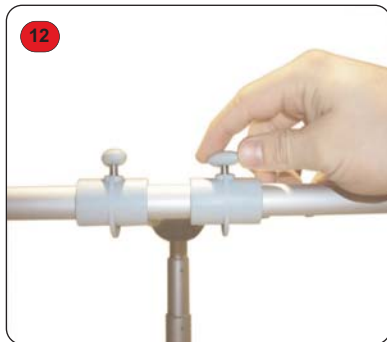

Tighten the screws on top of the Upper Mounting Assembly to keep the Horizontal poles in place.



Slide the graphic mounts on either side of the Horizontal poles.

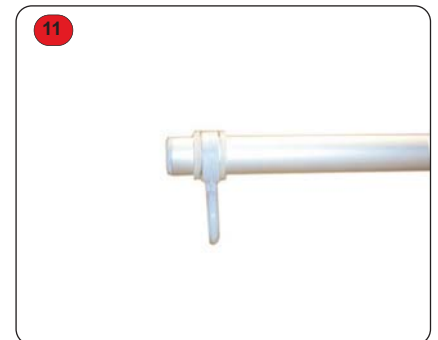

Place a stopper on either side of the last Graphic Mount to keep the graphic from sliding either way.



There should be two Graphic Mounts on either side of the Horizontal pole.



Hook the Graphic Mounts through the Grommets on the graphic.



The graphic should hang evenly on the Horizontal pole.


Assembly Instructions




Repeat the steps above for the other side.



Extend the flag pole until the graphics are at the desired height.

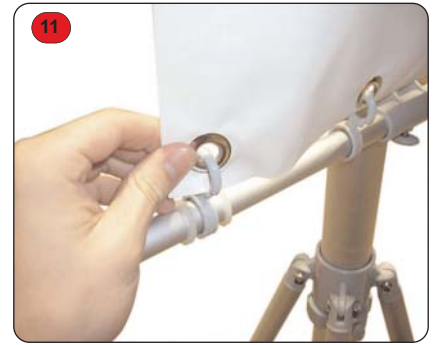

Attach the graphic to the Bottom Mount using the Graphic Mounts and Grommets as done with the top.

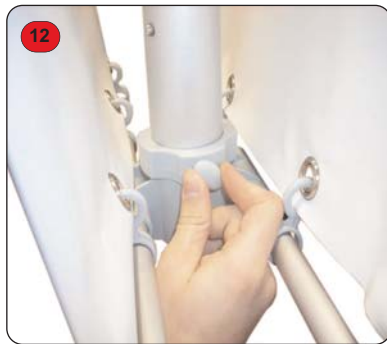

Finally, push the Retaining Ring down on the Bottom Mount until the graphic is taut. Then, tighten the Ring using the screw on the side.



The finished Wind Dancer Spire Conversion will look like this.